



LG VX5300 outer LCD screen replacement

Written By: Ashley





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Front LCD Screen



- Remove the rubber stoppers from the four corners of the front screen.

Step 2




- Using the Phillips screwdriver, carefully remove all four screws.

Step 3




- To pry open the face plate, use the iFixit Opener tool. Place it in the crease of the phone.

Step 4 — LCD Screen

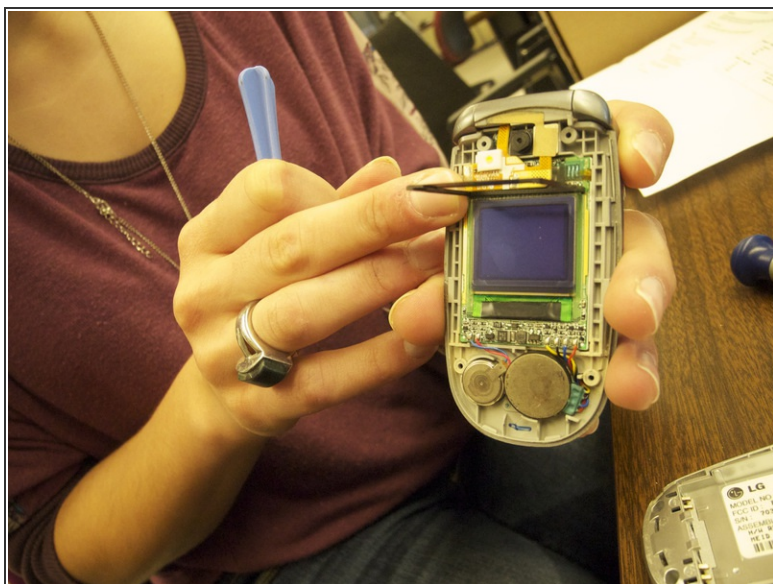


- Carefully lift off the black frame around the LCD screen and set it aside

Step 5

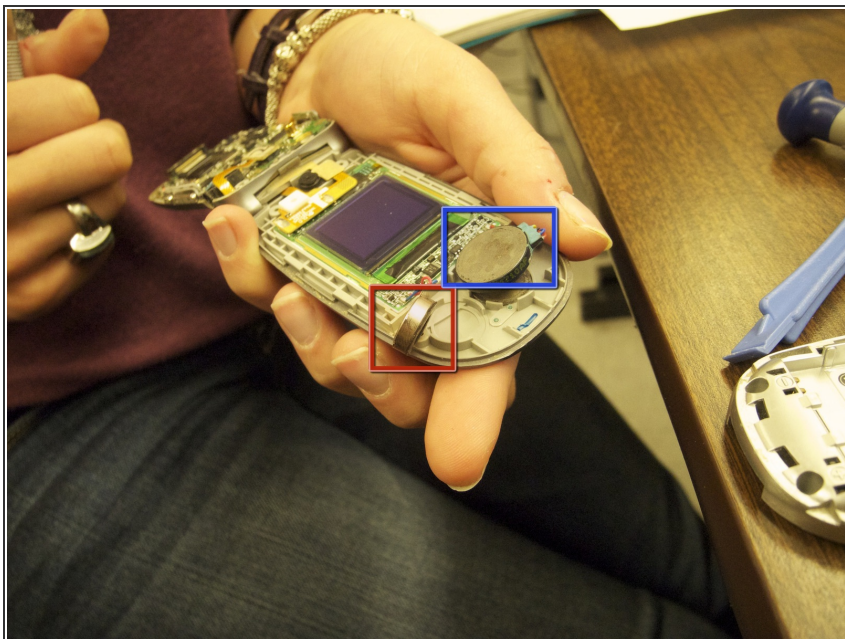


- Using the tweezers, lift the speaker out.
- Next, lift the battery out using the tweezers.

Step 6

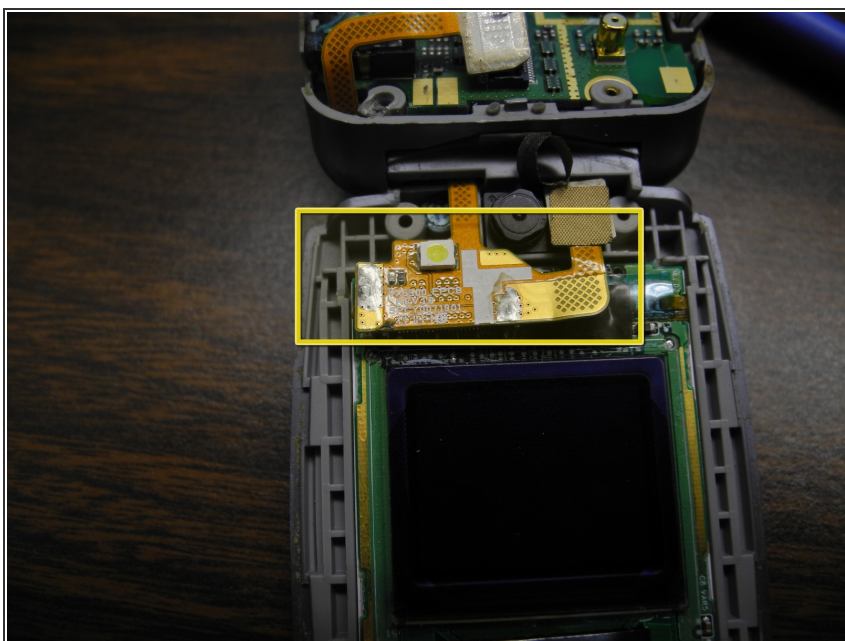

- Using tweezers, carefully disconnect the orange ribbon from the computer chip

Step 7

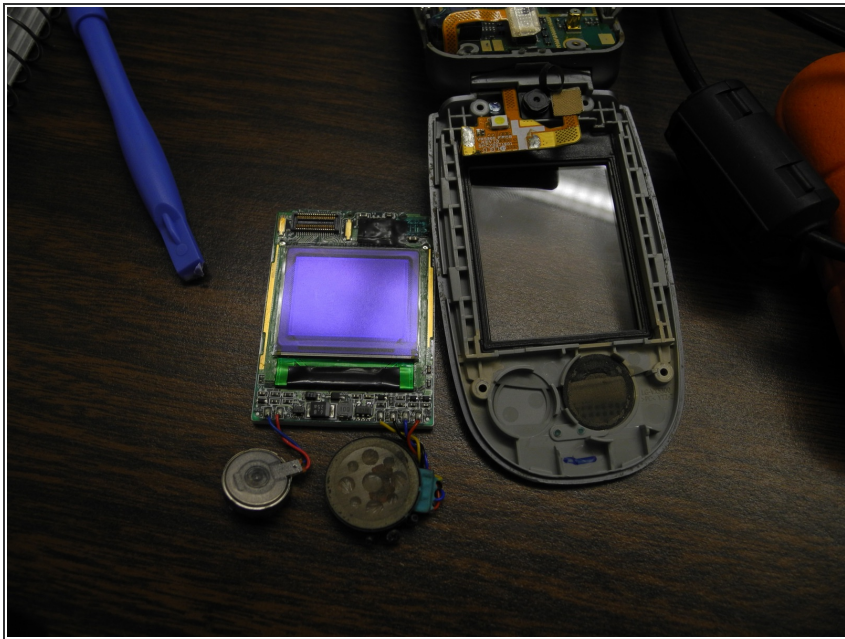

- Remove the LCD screen and replace with a new one
- Then, replace the battery and the speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-23 06:08:43 PM.